

This is our installation guide for the following products below.


These bracket installations should be done **before tiling.**




Bowl



Bowl Two Tone



Box



Box Two Tone



Cast



Cube




Funl




Hoop




Hoop Raw



Isla




Mill




Pill




Prism Circle




Prism Rectangle




Shelf Oval



Slip




Stepp Circle




Stepp Rectangle



Tubb



Vesl Square



Vesl Rectangle

What's in your box:

Wall mount basin kit

Your selected
concrete basin
(design varies per basin)




Mounting
Bolts



Do not place tools, taps and mixers inside or near the basin at any time.

Damage inflicted by doing so is not covered by our warranty.

Glue

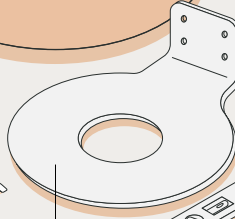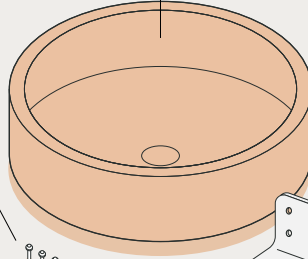


Assorted
Horseshoe
packers

Spirit
level

Wall mount
bracket
(design varies per basin)


01

Use packer to level bracket if required

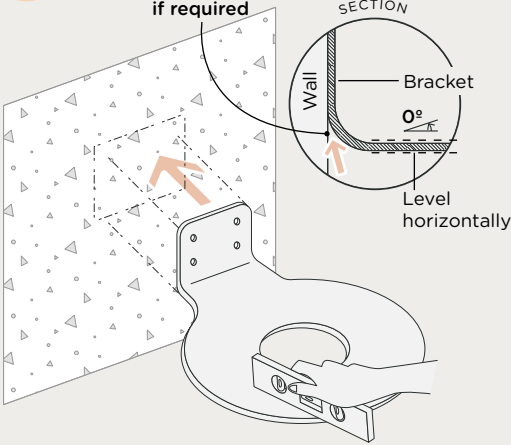


Mount bracket before tiling, ensuring bracket is placed at level height.

02

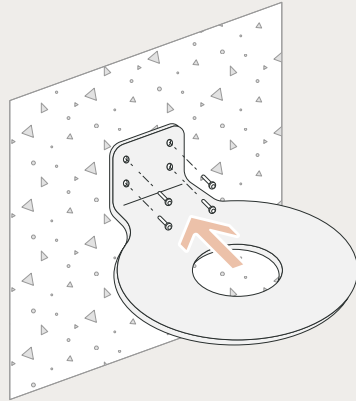


Bolt bracket to substrate wall.

03

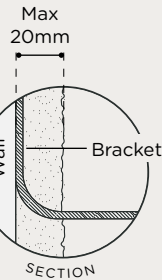


Screed (20mm max) and tile over mount bracket.

04

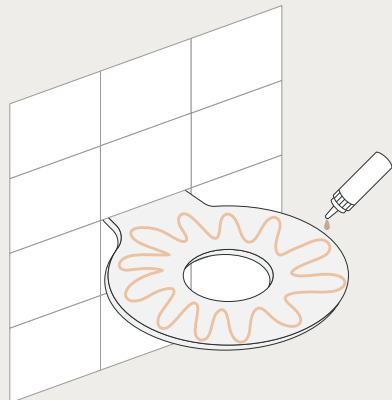


Apply glue provided to the mount bracket.

05

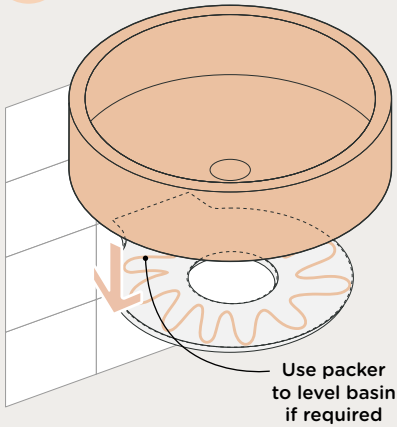


Lower basin onto mount bracket, ensuring basin is centrally placed.

06

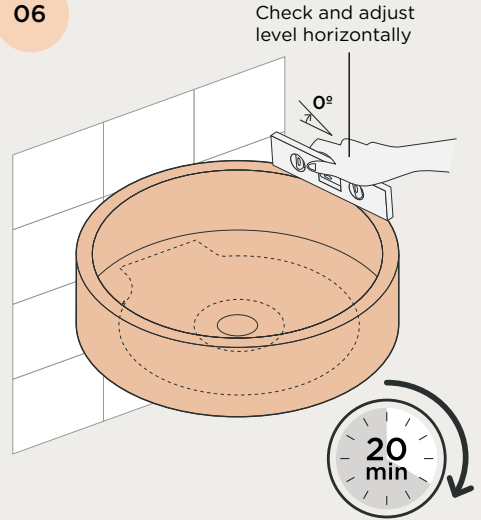

Working time for adhesion dry to touch: 20 mins.

07

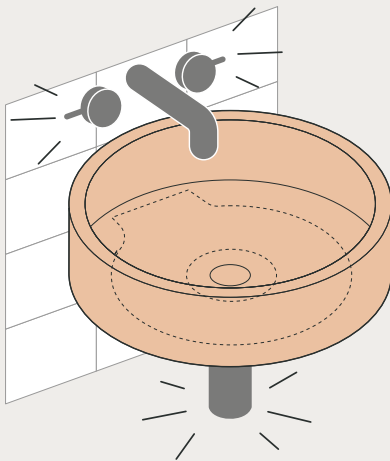

Carefully fit plumbing fixtures while glue dries.

Got a question? Drop us a line, we're here to help!

info@noodco.com.au

noodco.com.au